
# SQD 3-Tip & J hook - Build Sheet

### **Visuals**

#### **Diagram A: Rack Assembly**



**Diagram B: Overall Shape** 

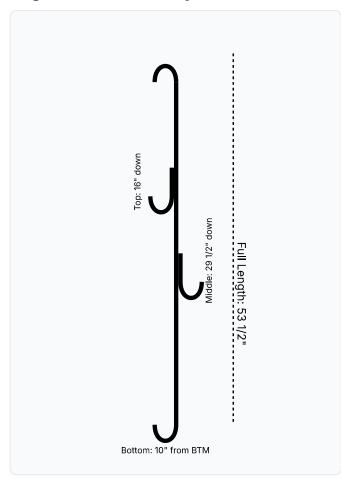

#### **Materials & Cuts**

• **Main Rod:** 3/4" rod

• Full Length: 53 1/2"

#### **Instructions**

- **Form Main Rod:** Take the 3/4" rod and form the main J-shape as shown in 'Diagram B', making the main bend at 22" from the top.
- Add Top Hook: Form and weld the hanging hook to the top of the main rod. Refer to 'Diagram A' for final placement.
- Add Side Hooks: Form and weld the two side J-hooks onto the main rod at the specified locations, ensuring they are on alternating sides.

## **Hook Spacing**

• Top Hook: 16" down from top

• Middle Hook: 29 1/2" down from top

• **Bottom Hook:** 10" up from bottom