

# **Copper J Hook - Build Sheet**

# **Visuals**

### **Main Hook Assembly**

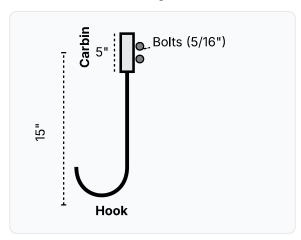

#### **Copper Part & Bending**

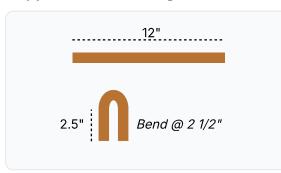

# **Materials & Cuts**

• Hook: 15" length

• Carbin: 5" length

• Copper: 12" length

• **Bolts:** 2x (5/16")

# **Assembly Instructions**

- Bend Copper: Take the 12" copper piece and bend at the 2 1/2" mark.
- Weld: Weld the 5" Carbin piece to the top of the 15" hook piece as shown in the diagram.
- Attach: Use the two 5/16" bolts to attach the bent copper part to the main assembly.